



Features

- External crystal oscillator
 - 4MHz: count up to 44,000 counts
(input range: $\pm 440\text{mV}$)
 - 10MHz: emulated up to 440,000 counts
(input range: $\pm 440\text{mV}$)
- Four selectable conversion rates:
20, 10, 5, 2 conversion/sec
- On chip resistance switches for range
Changing.
- Voltage (DC/AC), current(DC/AC), resistor,
diode, frequency and duty cycle measurement
- 400mV independent input
- on chip OP amp' for AC/DC conversion
- Auto zeroing function
- X10 function
- I/O port for microprocessor
- 400MHz Frequency counter and 1MHz duty
cycle measurement
- On chip buzzer driving: 2KHz
- Single 5V DC power supply (V+ to V-)
- Low battery detection
- SLEEP mode
- 64-pin QFP

Description

The ES51999 is a 44,000/440,000-count dual-slope analog-to-digital converter (ADC) with X10 functions. The ES51999 also include frequency and duty cycle measurement. The conversion rate and resolution can be selected/decided by external microprocessor. In additional, other functions are also provided for low battery detection, on chip buzzer driving, and I/O port with microprocessor.



Absolute Maximum Ratings

| Characteristic | Rating |
|--------------------------------------|--------------------------------|
| Positive Supply Voltage (V+ to AGND) | 3.5V |
| Negative Supply Voltage (V- to AGND) | -3.5V |
| Analog I/O Voltage | ((V-) - 0.5V) to ((V+) + 0.5V) |
| Digital I/O Voltage | ((V-) - 0.5V) to ((V+) + 0.5V) |
| Power Dissipation | 800mW |
| Operating Temperature | 0°C to 70°C |
| Storage Temperature | -25°C to 125°C |
| Lead Temperature (soldering, 10sec) | 270°C |

Electrical Characteristics


TA=25°C, DGND=AGND=0V

| Symbol | Parameter | Test Condition | Min. | Typ. | Max. | Unit |
|--------|---|---|-------|-------|-------|--------|
| V+ | Positive Power Supply | | 2.3 | 2.5 | 2.7 | V |
| V- | Negative Power Supply | | -2.3 | -2.5 | -2.7 | V |
| I(V+) | Operation Supply Current | Normal power on (V+ to V-) | - | 1.0 | 1.7 | mA |
| I(GND) | Supply Current of DGND to V- | ΔV between DGND and V- is -0.2V | 5 | 10 | - | mA |
| Zero | Zero Input Reading | 1 M Ω input resistor, null to zero by uP. | -0 | 0 | +0 | count |
| NLV1 | Nonlinearity (Voltage x1) | Best case straight line | -0.01 | - | 0.01 | %F.S. |
| REV1 | Rollover Error (Voltage x1) | 1 M Ω input resistor | -0.01 | - | 0.01 | %F.S. |
| NLV10 | Nonlinearity (Voltage x10) | Best case straight line | -0.1 | - | 0.1 | %F.S. |
| REV10 | Rollover Error (Voltage x10) | 1 M Ω input resistor | -0.1 | - | 0.1 | %F.S. |
| V12 | Band Gap Voltage Reference | 100 k Ω between V12 and AGND | -1.31 | -1.23 | -1.10 | V |
| LBATT | Low Battery Detection | LBATT to V12 | -60 | 0 | 60 | mV |
| TCRF | Reference Voltage (V12) Temperature Coefficient | 100 k Ω between V12 and AGND (0°C to 70°C) | - | 50 | - | ppm/°C |



Pin configuration

QFP-64pin

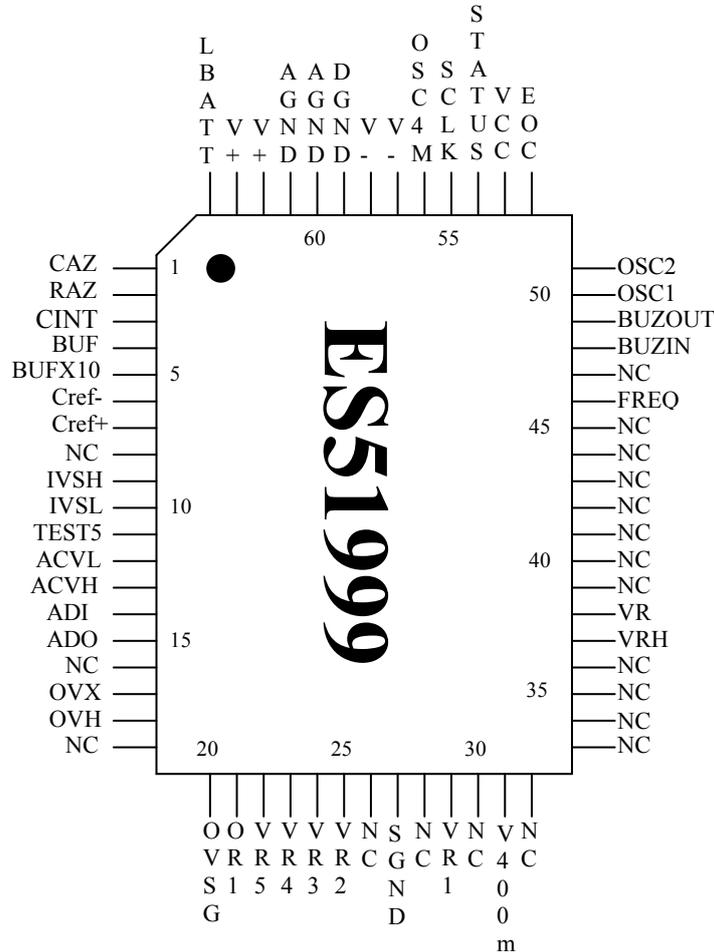

Pin Description

| Pin No. | Symbol | Type | Description |
|---------|--------|------|---|
| 1 | CAZ | O | Auto-zero capacitor connection |
| 2 | RAZ | O | Auto-zero resistance connection |
| 3 | CINT | O | Integration capacitor connection |
| 4 | BUF | O | Integration resistor connection output |
| 5 | BUFX10 | O | Integration resistor connection output |
| 6 | Cref- | I/O | Negative connection for reference capacitor |
| 7 | Cref+ | I/O | Positive connection for reference capacitor |
| 9 | IVSH | I | High current measurement input |
| 10 | IVSL | I | Low current measurement input |
| 11 | TEST5 | I/O | Test Pin |
| 12 | ACVL | O | Negative output of AC to DC converter |
| 13 | ACVH | O | Positive output of AC to DC converter. |
| 14 | ADI | I | Negative input of internal AC to DC OpAmp |
| 15 | ADO | O | Output of internal AC to DC OpAmp. |

Continued on next page



| Pin No. | Symbol | Type | Description |
|---|--------|--------------|---|
| 17 | OVX | I | Input high voltage for resistance measurement. |
| 18 | OVH | I | Output connection for resistance measurement. |
| 20 | OVSG | I | Sense low voltage for resistance measurement. |
| 21 | OR1 | O | Reference resistor connection for 399.9Ω range. |
| 22 | VR5 | O | Voltage measurement ÷10000 attenuator (4000V.) |
| 23 | VR4 | O | Voltage measurement ÷1000 attenuator (400.0V.) |
| 24 | VR3 | O | Voltage measurement ÷100 attenuator (40.00V.) |
| 25 | VR2 | O | Voltage measurement ÷10 attenuator (4.000V.) |
| 27 | SGND | G | Signal Ground. |
| 29 | VR1 | I | Measurement input. |
| 31 | V400m | I | 400mV independent input. |
| 37 | VRH | O | Output of band-gap voltage reference. Typically -1.2V |
| 38 | VR | O | Reference input voltage connection. Typically -200mV |
| 46 | FREQ | I | Frequency counter input, offset to V-/2 |
| 48 | BUZIN | I | Enables the buzzer. Low action. |
| 49 | BUZOUT | O | Outputs a 2KHz audio frequency signal for driving piezoelectric buzzer when BUZIN is low. |
| 50 | OSC1 | I | Crystal oscillator input connection. |
| 51 | OSC2 | O | Crystal oscillator output connection. |
| 52 | EOC | O | End of conversion indicator |
| 53 | VCC | I | The high level of digital I/O signals, which is connected to VCC pin of microprocessor. |
| 54 | STATUS | I/O | ES51966 sends current status to microprocessor or receives controlled status from microprocessor. |
| 55 | SCLK | I | Clock input from microprocessor. |
| 56 | OSC4M | I | Crystal oscillator selection. NC for 4MHz; connect to V- for 10MHz. |
| 57 | V- | P | Negative supply voltage, connected to cathode of battery typically.. |
| 58 | V- | P | Negative supply voltage, connected to cathode of battery typically. |
| 59 | DGND | G | Digital Ground (Output of on-chip DC-DC converter), $V_{DGND} = (V+ - V-) / 2$ |
| 60 | AGND | G | Analog Ground |
| 61 | AGND | G | Analog Ground |
| 62 | V+ | P | Positive supply voltage |
| 63 | V+ | P | Positive supply voltage |
| 64 | LBATT | I | Low battery voltage detection |
| Pin No. : 8 , 16 , 19 , 26 , 28 , 30 , 32-36 , 39-45 , 47 | | No connected | |
| P: Power, | | G: Ground, | I: Input, O: Output |




Operation `Mode

(1) Digital Interface between ES51999 and Microprocessor

The EOC, SCLK and STATUS of the ES51999 are used as digital communicating interface between ES51999 and microprocessor. The STATUS pin is bi-directional, and the others are unilateral: EOC is from ES51999 to microprocessor and SCLK is from microprocessor to ES51999. The timing and data of the communication are as follows:

mode 1: ES51999 receives controlled status from microprocessor.

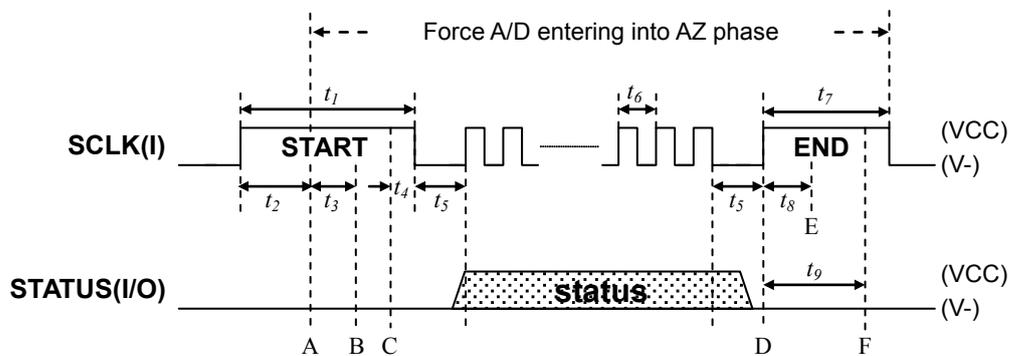

Timing of the above figure: $(T = 0.25\mu\text{s})$

| | | | |
|-------|----------------------|-------|---------------------|
| t_1 | $(1040 \sim 4096) T$ | t_6 | $(32 \sim 512) T$ |
| t_2 | $512 T$ | t_7 | $(520 \sim 1020) T$ |
| t_3 | $(4 \sim 256) T$ | t_8 | $(0 \sim 256) T$ |
| t_4 | $> 4 T$ | t_9 | $520 T$ |
| t_5 | $(16 \sim 1024) T$ | | |

Note: 1. At START:


After time A, ES51999 enter into AZ phase. And at the same time, STATUS is changed from output pin to input pin with a 3uA pull low current provided by ES51999 internally. Then microprocessor can send control status to STATUS. It is suggested that micro-processor begins to drive STATUS between B and C.

2. At END:

The microprocessor stopped driving STATUS between D and E, and ES51999 will begin to drive STATUS after F.



3. The detail timing between SCLK and STATUS is as follow:

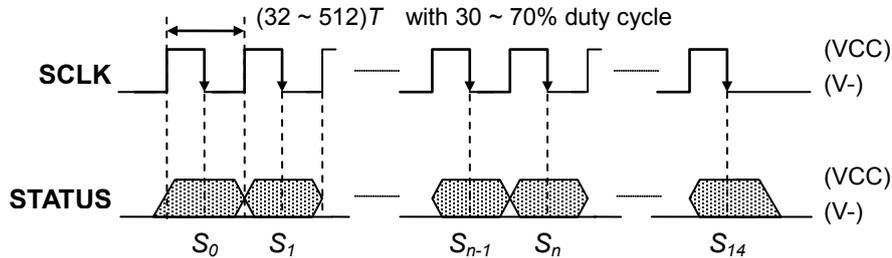

Serial Data Format (STATUS):

| | | | | | | | |
|----|----|----|----|----|----|----|----|
| F0 | F1 | F2 | Q0 | Q1 | Q2 | C0 | C1 |
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |

| | | | | | | |
|----|----|------|------|-------|-----|-------|
| C2 | AC | ZERO | PEAK | PHCAL | X10 | SLEEP |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 |

(All defaults are '0')

F0, F1, F2 measurement selection.

| F0 | F1 | F2 | Measurement |
|----|----|----|---------------------------------------|
| 0 | 0 | 0 | Voltage ² |
| 0 | 0 | 1 | Voltage with frequency ³ |
| 0 | 1 | 0 | Current ² |
| 0 | 1 | 1 | Current with frequency ³ |
| 1 | 0 | 0 | Resistance |
| 1 | 0 | 1 | Diode |
| 1 | 1 | 0 | Frequency and duty cycle ¹ |

¹ In Frequency and duty cycle measurement, ES51999 measures both the frequency and duty cycle of the input signal FREQ (pin 46) simultaneously.

² In Voltage/Current measurement, only voltage/current is measured.

³ In Voltage/Current with frequency measurement, the frequency of FREQ is also measured in addition to voltage/current. Detailed descriptions of these measurement modes, please see the following sections.

Q0, Q1, Q2 range selection.

| Q0 | Q1 | Q2 | V ¹ | A ¹ | Ω ¹ | F ^{2,3} |
|----|----|----|----------------|----------------------------|----------------|------------------|
| 0 | 0 | 0 | 440mV | IVSL (pin 10) ⁴ | 420Ω | 40Hz |
| 0 | 0 | 1 | 4.4V | IVSH (pin 9) ⁴ | 4.2KΩ | 400Hz |
| 0 | 1 | 0 | 44V | | 42KΩ | 4KHz |
| 0 | 1 | 1 | 440V | | 420KΩ | 40KHz |
| 1 | 0 | 0 | 4400V | | 4.2MΩ | 400KHz |
| 1 | 0 | 1 | | | 42MΩ | 4MHz |
| 1 | 1 | 0 | | | | 40MHz |
| 1 | 1 | 1 | | | | 400MHz |

¹ When oscillator is 4MHz, voltage/current can be counted up to 44,000, and resistance can be counted up to 42,000.

When oscillator is 10MHz, voltage/current can be counted up to 440,000, and resistance can be counted to 420,000.



²Frequency measurement could only be counted up to 40,000 regardless the oscillator frequency.

³ In 40Hz range, ES51999 can count from 0.5Hz to 40Hz; in 400Hz range, it can count from 2.5Hz to 400Hz; in 4000Hz, it can count from 25Hz to 4000Hz.

⁴ In Current measurement, two input pins (IVSH and IVSL) are provided and can be selected by Q2.

C0, C1, C2 In voltage (F[0:2] = “000”) and current (“010”) measurement, C0 & C1 are used for conversion rate selection:

| C0 | C1 | Conversion/sec | Conversion period |
|----|----|----------------|-------------------|
| 0 | 1 | 20 | 50ms |
| 0 | 0 | 10 | 100ms |
| 1 | 0 | 5 | 200ms |
| 1 | 1 | 2 | 500ms |

10, 5, and 2 conversion/sec are 50Hz rejection, while 2 conversion/sec is 60Hz rejection.

In resistance measurement, the conversion period is:

| C0 | C1 | Conversion period |
|----|----|-------------------|
| 0 | 1 | 70ms |
| 0 | 0 | 140ms |
| 1 | 0 | 280ms |
| 1 | 1 | 700ms |

In frequency and duty cycle (F[0:2] = “110”) measurement, only C0 is used for conversion period selection. When the range is from 40Hz to 4000Hz, the conversion periods are not selectable (see the description in Frequency and duty cycle measurement); and when the range is from 40KHz to 400MHz, the conversion period is decided by C0:

| C0 | Conversion period |
|----|-------------------|
| 0 | 110ms |
| 1 | 1.1s |

In voltage/current with frequency mode (F[0:2] = “001” and “011”), the conversion period is fixed at 110ms, and C0, C1 & C2 decide the range of the frequency measurement:

| C0 | C1 | C2 | Range |
|----|----|----|--------|
| 0 | - | - | 40KHz |
| 1 | 0 | 0 | 400KHz |
| 1 | 0 | 1 | 4MHz |
| 1 | 1 | 0 | 40MHz |
| 1 | 1 | 1 | 400MHz |




AC 'L' for DC; 'H' for AC in Voltage/Current measurement. If not in voltage or current measurement, this bit will be ignored. *Set AC=1 at resistance measurement will make readings of 4MΩ range more stable but slower response.*

ZERO 'H' for zero calibration.

X10 'H' for X10 function.

SLEEP 'H' for DMM in sleep mode.


mode 2: ES51999 sends the status and counts (counter from DINT) to uP.

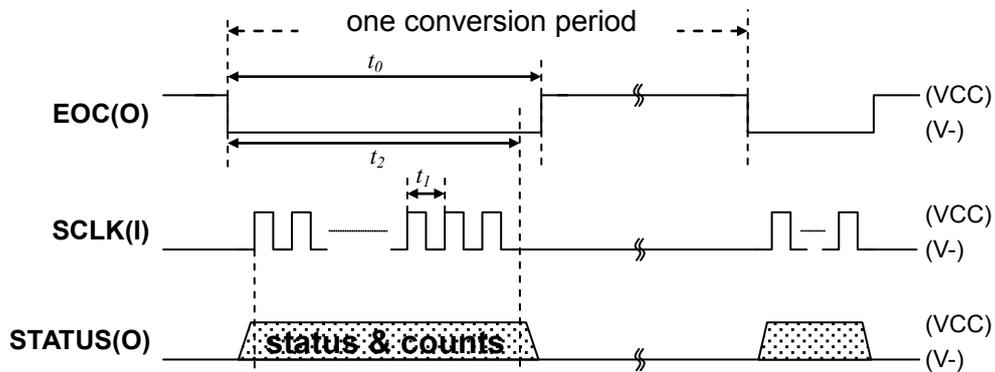

t_0 is at least 5ms and t_1 must be $(32 \sim 512)T$, where $T = 0.25\mu s$.

t_2 is the time from the rising edge of EOC to the last data been transferred. t_2 is no more than 4.9ms. That is, all results must be transferred within 4.9ms from the rising edge of EOC.

The detail timing between SCLK and STATUS is as follow:

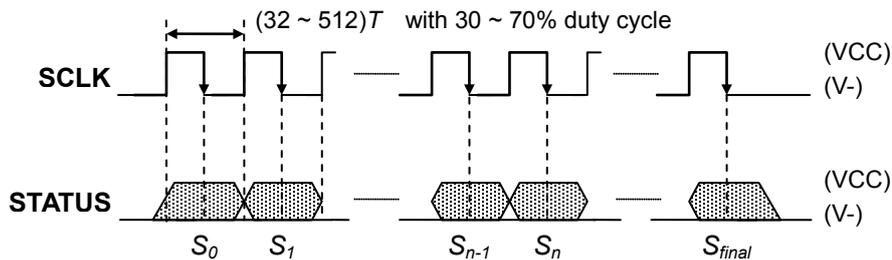



Serial Data Format (STATUS):

- Voltage (“000”), current (“010”), resistance (“100”) and diode (“101”) measurement

| | | | |
|------|---|------|--------------------|
| SIGN | 0 | BATT | D0<0:19> (20 bits) |
| 0 | 1 | 2 | 3 ~ 22 |

SIGN ‘H’ for negative; ‘L’ for positive. In AC, Ω and diode measurement, this bit can be ignored.

BATT ‘H’ for battery-low indication.

D0<0:19> Conversion results (magnitude). The format is binary code. LSB outputs first. When oscillator is 4MHz, D0<0:19> is up to 44,000 counts. When oscillator is 10MHz, if the conversion rate is 20/sec, it counts to 220,000; if the conversion rate is not 20/sec, it counts to 440,000.

-

- Voltage/current with frequency (“001” & “011”) measurement:

| | | | | |
|------|---|------|--------------------|--------------------|
| SIGN | 0 | BATT | D0<0:19> (20 bits) | D1<0:17> (18 bits) |
| 0 | 1 | 2 | 3 ~ 22 | 23 ~ 40 |

SIGN For voltage/current measurement. ‘H’ for negative; ‘L’ for positive. In AC, Ω and diode measurement, this bit can be ignored.

BATT ‘H’ for battery-low indication.

D0<0:19> Conversion result of voltage or current measurement.

D1<0:17> Conversion result of frequency measurement.

- Frequency (“110”) measurement:

| | | | | | |
|----|----|------|--------------------|--------------------|------------------|
| OL | UL | BATT | D0<0:19> (20 bits) | D1<0:17> (18 bits) | D2<0:5> (6 bits) |
| 0 | 1 | 2 | 3 ~ 22 | 23 ~ 40 | 41 ~ 46 |

OL Overflow when in 40, 400 and 4000Hz ranges.

UL Underflow when in 40, 400 and 4000Hz ranges.

BATT ‘H’ for battery-low indication.

D0<0:19>, D1<0:17>, D2<0:5> Please see the description in frequency and duty cycle measurement.



(2) Dual Slope A/D—four phases timing

The ES51999’s measurement cycle contains four phases, ZI, AZ, INT, and DINT. The timing will be changed as conversion rate changed. There are some examples as follow, and the others are alike.

ES51999 is a dual-slope analog-to-digital converter (ADC). Figure 2.1 is a structure of dual-slope integrator. Its measurement cycle has two distinct phases: input signal integration (INT) phase and reference voltage integration (DINT) phase.

In INT phase, the input signal is integrated for a fixed time period, then A/D enters DINT phase in which an opposite polarity constant reference voltage is integrated until the integrator output voltage becomes to zero. Since both the time for input signal integration and the reference voltage are fixed, the de-integration time is proportional to the input signal. Hence, we can define the mathematical equation about input signal, reference voltage integration (see Figure 2.1):

$$\frac{1}{Buf \times C_{int}} \int_0^{T_{INT}} V_{IN}(t) dt = \frac{1}{Buf \times C_{int}} \times V_{REF} \times T_{DINT}$$

where, $V_{IN}(t)$ = input signal

V_{REF} = reference voltage


T_{INT} = integration time (fixed)

T_{DINT} = de-integration time (proportional to $V_{IN}(t)$)

If $V_{IN}(t)$ is a constant, we can rewrite above equation:

$$T_{DINT} = \frac{T_{INT}}{V_{REF}} \times V_{IN}$$

Besides the INT phase and DINT phase, ES51999 exploits auto zero (AZ) phase and zero integration (ZI) phase to achieve accurate measurement. In AZ phase, the system offset is stored. The offset error will be eliminated in DINT phase. Thus a higher accuracy could be obtained. In ZI phase, the internal status will be recovered quickly to that of zero input. Thus the succeeding measurements won’t be disturbed by current measurement especially in case of overload.

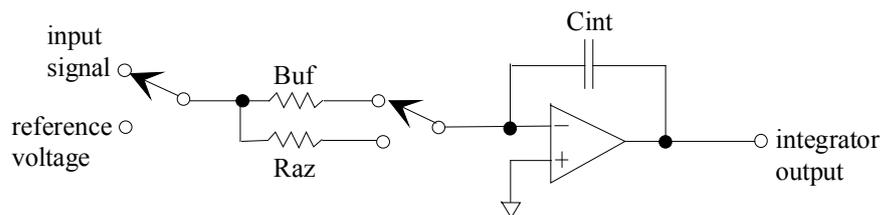

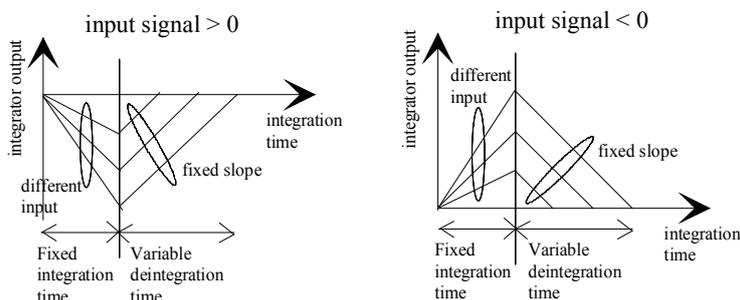


Figure 2.1 the structure of dual-slope integrator and its output waveform.

As mentioned above, the measurement cycle of ES51999 contains four phases:

- (1) auto zero phase (AZ)
- (2) input signal integration phase (INT)
- (3) reference voltage integration phase (DINT)
- (4) zero integration phase (ZI)

Normally, the time ratios of these four phases, AZ, INT, DINT and ZI to the entire measurement cycle are 20%, 20%, 44% and 16% respectively. However the actual duration of each phase depends on conversion rate. The time of each conversion rate are shown in the table below in which voltage/current (without PEAK HOLD or frequency), and diode measurement use this conversion time.

| C[0:1] | CR (times/sec) | ZI (ms) | AZ (ms) | INT (ms) | DINT (ms) |
|-----------|----------------|-----------|-----------|-----------|-----------|
| 01 | 20 | 8 | 10 | 10 | 22 |
| 00 | 10 | 16 | 20 | 20 | 44 |
| 10 | 5 | 32 | 40 | 40 | 88 |
| 11 | 2 | 80 | 100 | 100 | 220 |

Note: $V_{ref} = -200 \text{ mV}$.

(3) Component Value Selection for ADC

For various application requirements on conversion rate and input full range, we suggest nominal values for external components of ADC in Figure 2.1 to obtain better performance. Under default condition with operating clock = 4 MHz:

- (1) conversion rate = 10 times/sec
 - (2) reference voltage = -200 mV
 - (3) input signal full scale = 440 mV (sensitivity = 10 μV)
- we suggest that $C_{int} = 33 \text{ nF}$, $B_{uf} = 200 \text{ k}\Omega$, $B_{uf} \times 10 = 20\text{K}$

If a user selects a different conversion rate rather than default, the integration capacitor

Cint value must be changed according to the following rule for better performance:

$$Cint \times (\text{conversion rate}) = (33 \text{ nF}) \times (10 \text{ times/sec}).$$

It is important that the actual Cint value should be no less than the nominal value. A smaller Cint reduces the input full range. However a larger Cint might have weaker noise immunity than the suggested one.

A user could enlarge the input full range by changing reference voltage (Vref) and the amount of integration resistor (Buf and Raz). For example, if Vref, Buf and Raz are enlarged as twice than the default values then the input full range becomes 880 mV. The input full range can be enlarged up to 1.1V (2.5 times than the default case). We list general rules in below which might be helpful in determining component values.

$$\text{Buf} / (\text{reference voltage}) = 200 \text{ k}\Omega / (-200 \text{ mV})$$

(4) Voltage Measurement

DC/AC voltage measurement

A re-configurable voltage divider provides a suitable full-scale range voltage measurement mode. The following table summarizes the full-scale ranges in each configuration.

| Configuration | Full Scale Range | Divider Ratio | Resister Connection |
|---------------|------------------|---------------|---------------------|
| VR1 | 440.00mV | 1 | - |
| VR2 | 4.4000V | 1/10 | R2 / (R1+R2) |
| VR3 | 44.000V | 1/100 | R3 / (R1+R3) |
| VR3 | 440.00V | 1/1000 | R4 / (R1+R4) |
| VR5 | 4400.0V | 1/10000 | R5 / (R1+R5) |

In configuration VR1, the full range is 440mV, and the voltage inputs from V400m pin to prevent the influence of noise when floating. In other configurations, the voltage inputs from VR1 pin.

Pin 11 to 15 are used for AC measurement. Figure 4.1 is the AC-to-DC circuit. AC-to-DC circuit extracts the AC part of the voltage (ADO - TEST5). ADC then converts the voltage of (ACVH - ACVL) to acquire the AC value of input voltage. Variable resistor 5K Ω is used to adjust the DC offset. Light shielding for diode D1 and D2 is required to prevent leakage current. This circuit works properly only when the input voltage is sinusoidal. If the input is not sinusoidal (e.g., square waves), a true RMS-to-DC converter chip will be needed to obtain the correct true RMS value of input signal.



If ADO and ADI short directly, ADI is the divided voltage of the input signal. Therefore, it can be used for oscillator display.

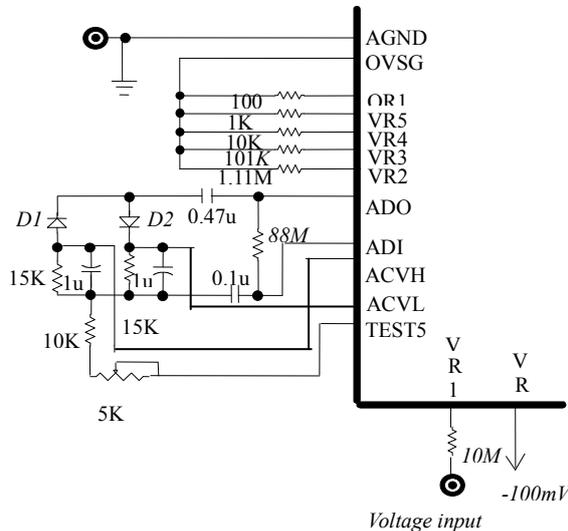


Figure 4.1 AC-to-DC circuit

The measurement of true RMS using ES636

If ES636 is used for true RMS measurement, the suggested application circuit is shown in Figure 4.2. When ES636 is used for true RMS, ADO and ADI pin short together, TEST5 pin keeps floating, and ACVL pin connects to SGND. And the OVSG pin short to AGND through a switch.

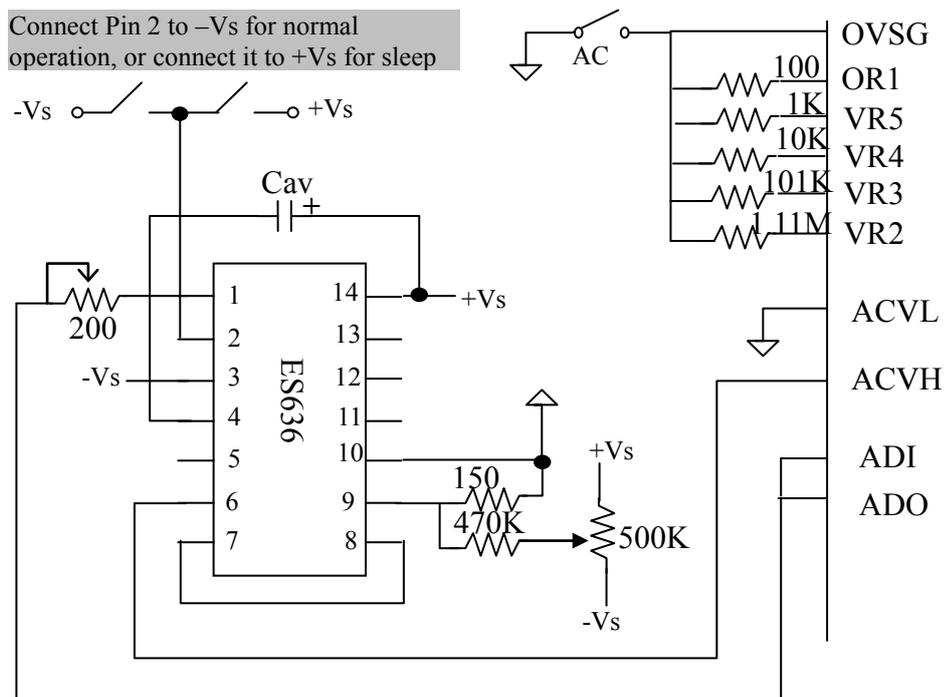


Figure 4.2 AC-to-DC circuit using ES636

(5) Diode Measurement

Diode measurement mode shares the same configuration with 4.4000V voltage mode. The range select bits Q0, Q1 and Q2 are not active in this mode.

(6) Current measurement

Current measurement has three mode. The following table summarizes the full scale range of each mode.

| Mode | Range Selection | Full scale |
|------|-----------------|-------------------|
| uA | IVSL/IVSH | 440.00uA/4400.0uA |
| mA | IVSL/IVSH | 44.000mA/440.00mA |
| 10A | IVSH | 44.000A |

*Operation Mode is based on application circuit .

*Range selection : IVSL (Q0,Q1,Q2) = (0,0,0)

IVSH (Q0,Q1,Q2) = (0,0,1)

(7) Multiplying by 10 (X10) Function

ES51999 includes X10 function. In X10 function mode, the output will be increasing tenfold. But the input range will be reduced to $\pm 44\text{mV}$. For example, if X10 function is enabled and the input is 10mV, output will be 10,000 counts, rather than 1,000 counts. To achieve X10 function, the integration resistor is $20\text{K}\Omega$, not $200\text{K}\Omega$ at INT phase, and remains $200\text{ k}\Omega$ at DINT phase. Because the resistor ($20\text{K}\Omega$) requires exactly 1/10 of

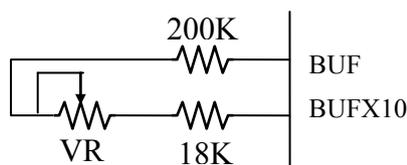


Figure 5.1 X10 function

integration resistor ($200\text{K}\Omega$), a variable resistor Rx is used to compensate these two resistors.

Resistor scheme of AZ/INT/DINT phases

In ES51999, an on-chip resistor is used for AZ mode. The internal chip is about $10\text{ k}\Omega$. The connection is shown in the following Figure 5.2.

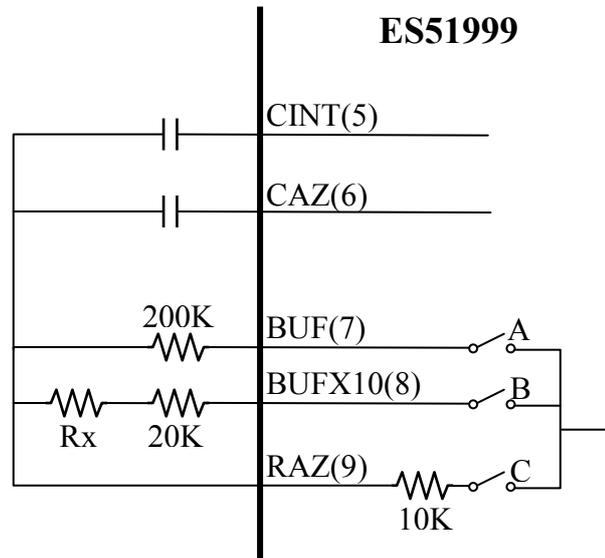


Figure 5.2 Resistor scheme of AZ phase

The status of switches A, B and C are described in the following table.

| switch | X10 function is OFF | | | X10 function is ON | | |
|--------|---------------------|------------|----------|--------------------|------------|----------|
| | INT phase | DINT phase | AZ phase | INT phase | DINT phase | AZ phase |
| A | ON | ON | ON | OFF | ON | ON |
| B | OFF | OFF | ON | ON | OFF | ON |
| C | OFF | OFF | ON | OFF | OFF | ON |

In AZ phase, all the switches is ON, the effective resistor is all the resistors in parallel. The effective resistor is therefore less than 10 kΩ. If X10 function is never used, the matching between 200 kΩ and (Rx + 20 kΩ) is not necessary. In this situation, (Rx + 20 kΩ) can be replaced by a resistor about 20 kΩ, or simply omitted.



(8) ZERO Calibration

In ES51999, the inherent delay of the OPAMP will introduce a few counts to the output. The method to prevent this problem is zero calibration. When zero calibration is ON, ES51999 shorts the input to SGND internally. uP needs to save the results of zero input. After zero calibration is OFF, the result of zero input is then deducte from the counts of the following measurements.

Zero calibration can be enabled on any measurement. When the ZERO bit is set by uP, ES51999 begins to execute zero calibration. ES51999 stops executing zero calibration until the ZERO bit is reset by uP.

In voltage/current/diode/capacitance measurement, the de-integration voltage is fixed, therefore zero calibration needs only be enabled once. The results could be used for all the following voltage/current/diode/capacitance measurement. However, in resistance measurement, the de-integration voltage is not fixed, and varies with the resistance to be measured. That is, zero calibration must be re-done if the resistance to be measured changes. For convenience, the result of zero input in voltage measurement could be used in resistance measurement.



(9)Frequency and duty cycle

When F[0:2] = “110”, ES51999 calculates frequency and duty cycle of FREQ at the same time. However, some more computations are required to obtain both the results. There are three output data at this measurement: D0, D1, and D2 which can be obtained from the serial output.

- 40Hz range:

$$\text{Frequency} = \frac{(D2+1) \times 10^6}{5 \times (150,950 + D1)} \quad , \quad \text{Duty cycle} = \frac{100 \times D0}{150,950 + D1} \%$$

- 400Hz range

$$\text{Frequency} = \frac{(D2+1) \times 10^6}{150,950 + D1} \quad , \quad \text{Duty cycle} = \frac{100 \times D0}{150,950 + D1} \%$$

- 4000Hz range

$$\text{Frequency} = \frac{(D2+1) \times 10^7}{150,950 + D1} \quad , \quad \text{Duty cycle} = \frac{100 \times D0}{150,950 + D1} \%$$

- 40KHz to 400MHz range (D2 is not needed.)

when C[0] = 0

$$\text{Frequency} = 10 \times D1 \quad , \quad \text{Duty cycle} = \frac{D0}{200} \%$$

when C[0] = 1

$$\text{Frequency} = D1 \quad , \quad \text{Duty cycle} = \frac{D0}{200} \%$$

ES51999 can measure frequency from 0.5Hz to 409.6MHz. For each range, the measurable frequencies and resolution are shown in the following table:

| Range | Measured frequency range | Resolutions |
|--------|--------------------------|-------------|
| 40Hz | 0.5Hz ~ 40Hz | 0.001Hz |
| 400Hz | 2.5Hz ~ 400Hz | 0.01Hz |
| 4000Hz | 25Hz ~ 4000Hz | 0.1Hz |
| 40KHz | 0 ~ 40.96KHz | 1Hz |
| 400KHz | 0 ~ 409.6KHz | 10Hz |
| 4MHz | 0 ~ 4.096MHz | 100Hz |
| 40MHz | 0 ~ 40.96MHz | 1KHz |
| 400MHz | 0 ~ 409.6MHz | 10KHz |

At 40/400/4000Hz, if the input frequency is less than its measurable range, it's underflow, and UL will set to 'H'. At the same ranges, if the input frequency is greater than its measurable range, it's overflow, and OL will set to 'H'. When UL or OL occur, the data D0, D1, and D2 will not be correct, please ignore them. At 40KHz ~ 400MHz ranges, OL and UL are always 'L', but it's overflow when the output counts is 40,960.

At different range, the conversion time is different. At 40/400/4000Hz, the conversion time is according to the input frequency. At other ranges, the conversion time is fixed at 110ms or 1.1s with C[0] = 0 or 1, respectively.

| Range | Conversion time | |
|--------|-----------------|----------|
| | C[0] = 0 | C[0] = 1 |
| 40Hz | 0.8s ~ 2s | |
| 400Hz | 0.16s ~ 0.4s | |
| 4000Hz | 0.16s ~ 0.4s | |
| 40KHz | 110ms | 1.1s |
| 400KHz | 110ms | 1.1s |
| 4MHz | 110ms | 1.1s |
| 40MHz | 110ms | 1.1s |
| 400MHz | 110ms | 1.1s |

(10)Voltage/Current Measurement with Frequency Counter

When F[0:2] = "001" or "011", ES51999 measures frequency of input together with voltage/current. At this measurement mode, voltage (or current) input is VR1/400mV (or IVSH/IVSL), and frequency input is FREQ. Q[0:2] is the range of voltage/current measurement, and C[0:2] is the range of frequency measurement. Only 40K to 400MHz ranges are selectable here. Unlike frequency measurement (F[0:2] = "110"), duty cycle is not measured in this mode. The conversion time is fixed at 110ms. Voltage/current can count up to 54,000 (or 540,000 when 10MHz OSC is used). AC and PEAK can still be active. D0 is the output of voltage/current, and (10×D1) is the result of frequency.




(11) SLEEP mode

If SLEEP bit is set 'H' by uP, ES51999 enters sleep mode. In sleep mode, if SCLK keeps low, all the circuit is shut down, and the supply current is about 0.1uA. If SCLK is high in sleep mode, only the oscillator is active to prepare for the following re-power operation.


(12) Digital Signals Rising and Falling times

The digital signals include EOC, SCLK, and STATUS, and those rising and falling times are defined as follow:

EOC and STATUS are output to microprocessor:

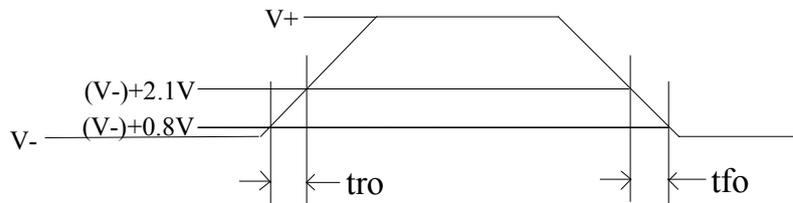

SCLK and STATUS are input from microprocessor:

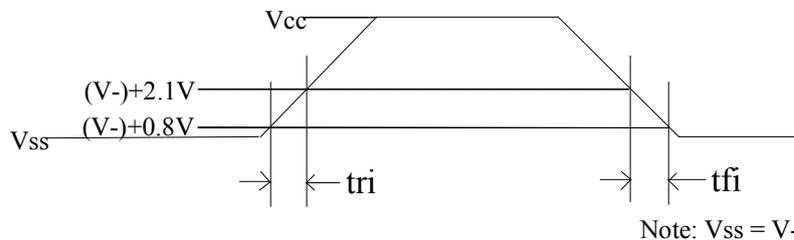

| Symbol | Condition | Min | Max | Units |
|--------|-----------|-----|-----|-------|
| tro | A/D to uP | - | 20 | ns |
| tfo | A/D to uP | - | 20 | ns |
| tri | uP to A/D | - | 20 | ns |
| tfi | uP to A/D | - | 20 | ns |



Note:


1. In PEAK mode, the wire of SCLK STATUS EOC must be shielded to prevent from the noise.
2. For the X10 feature, the BuffX10 resistor must be precisely adjusted to a tenth part of the Buffer resistor or the additional error will rise. ($R_{\text{buff}} = 10 R_{\text{buffX10}}$)
3. If use the AC-to-DC circuit as above schematic, the reading out will get a minus sign. Please ignore the minus sign instead of displaying. And the polarity of diode must not be changed.
4. The Zener Diodes are used for IC protection, and MUST be soldered on PCB first before soldering IC.

1. Tantalum capacitor
2. Tantalum capacitor



Package

64 pins QFP package size

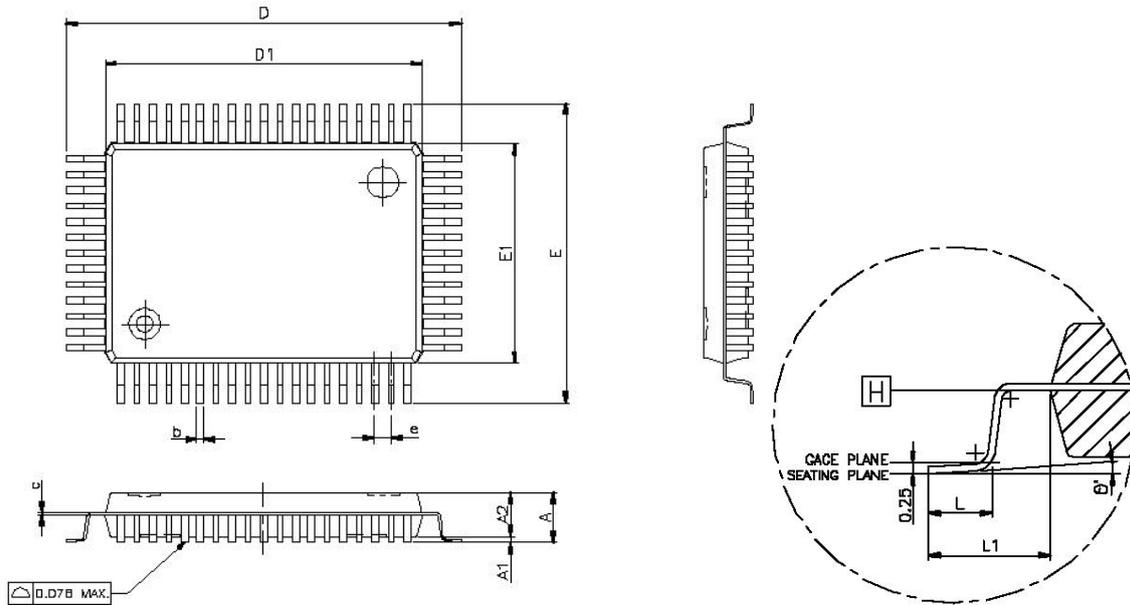

| SYMBOLS | MIN. | NOM | MAX. |
|----------------|-------------|------|------|
| A | — | — | 3.40 |
| A1 | 0.25 | — | — |
| A2 | 2.55 | 2.72 | 3.05 |
| b | 0.35 | 0.40 | 0.50 |
| c | 0.11 | 0.15 | 0.23 |
| D | 25.00 BASIC | | |
| D1 | 20.00 BASIC | | |
| e | 1.00 BASIC | | |
| E | 19.00 BASIC | | |
| E1 | 14.00 BASIC | | |
| L | 1.15 | 1.30 | 1.45 |
| L1 | 2.50 REF | | |
| θ° | 0 | 3.5 | 7 |

UNIT : mm

NOTES:

1. DATUM PLANE \square IS LOCATED AT THE BOTTOM OF THE MOLD PARTING LINE COINCIDENT WITH WHERE THE LEAD EXITS THE BODY.
2. DIMENSIONS D1 AND E1 DO NOT INCLUDE MOLD PROTRUSION. ALLOWABLE PROTRUSION IS 0.25 mm PER SIDE. DIMENSIONS D1 AND E1 DO INCLUDE MOLD MISMATCH AND ARE DETERMINED AT DATUM PLANE \square .
3. DIMENSION b DOES NOT INCLUDE DAMBAR PROTRUSION.